

3. Filler Valve:



The LPG refilling valve has a non-return valve and is located outside on the vehicle's body, in a secure location, either on the rear bumper or close to the petrol filler.

To refuel the vehicle in the former scenario, you just unscrew the cap and attach the gun, however in the later scenario, you might need to screw in a suitable gun adaptor.

ECE & ISO compliance.